

Hot Dog Warmer

Follow these instructions to operate the machine correctly.

1. Pour 1 ½ quarts into the water pan. Do not overfill. Use hot water
2. Place buns in the warmer basket
3. Place the hot dogs in the rotisserie
4. When you are ready to begin cooking move the switch to the ON position, this will rotate the rotisserie and the indicator bulb behind the screen will turn on.
5. Time required to cook the hot dogs will vary based on size and preference

With the heat control set on HI average size hot dogs will be ready in approximately 10-15 minutes.

After the hot dogs are cooked reduce the heat control setting to one, which will keep the hot dogs warm but will not overcook them

P: 414.427.9951

